


## Ignition Coil

### Removal

1. Disconnect battery ground cable.
2. Ignition coil connector and ignition coil.
  - Disconnect three connector from ignition coil.
  - Remove harness bracket bolt on cylinder head cover.
  - Remove fixing bolts on ignition coil.

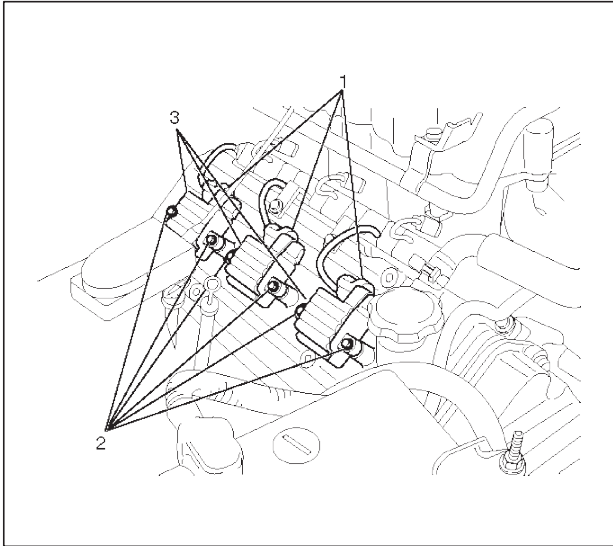

060RW121

### Legend

- (1) Ignition Coil Connector
- (2) Bolt
- (3) Ignition Coil Assembly


### Inspection and Repair

Check the ignition coil assembly for insulation. Check terminals for corrosion or damage, and replace as necessary.

Measuring resistance of ignition coil assembly.

Terminal No.	Limit
1 to 2	Without 0 ohm or infinity maximum ohm.
1 to 3	Same as above
2 to 3	Same as above

Measure resistance of ignition coil assembly, and replace the ignition coil assembly if its value exceeds the standard.

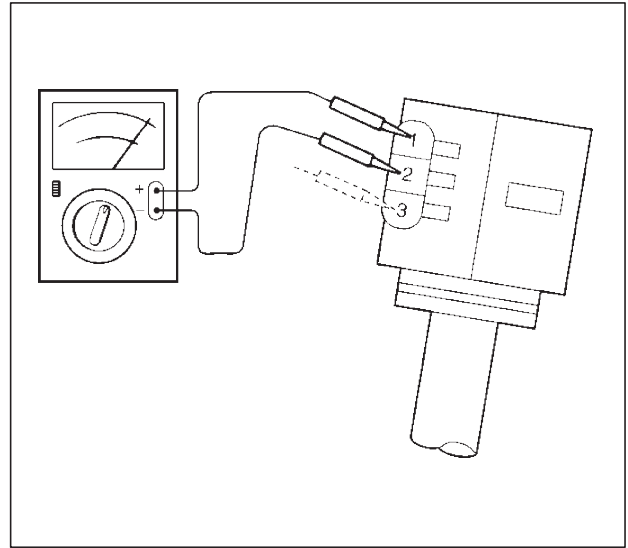


060RW006

### Installation

1. Install the ignition coil assembly (3).  
Connect ignition coil connector (1) and ignition coil (3), then tighten bolt (2) to the specified torque.

**Torque: 4 N·m (0.4 Kg·m/35 lb in)**

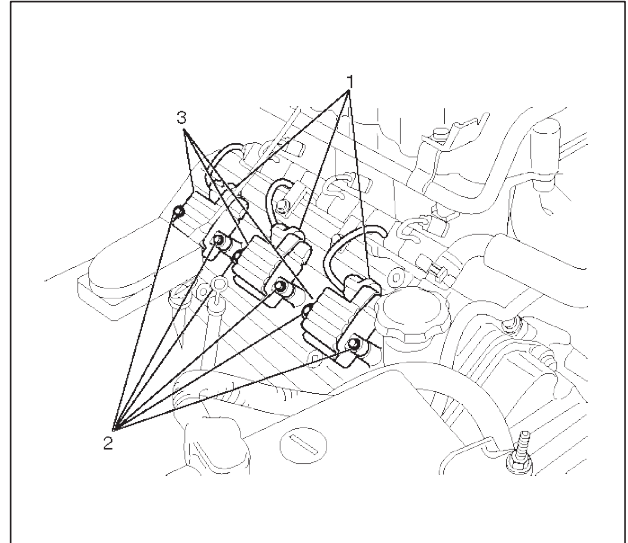

060RW121

2. Connect battery ground cable.