


UNIT REPAIR

TRANSFER CASE

Preceding Work : Removal of the transfer case

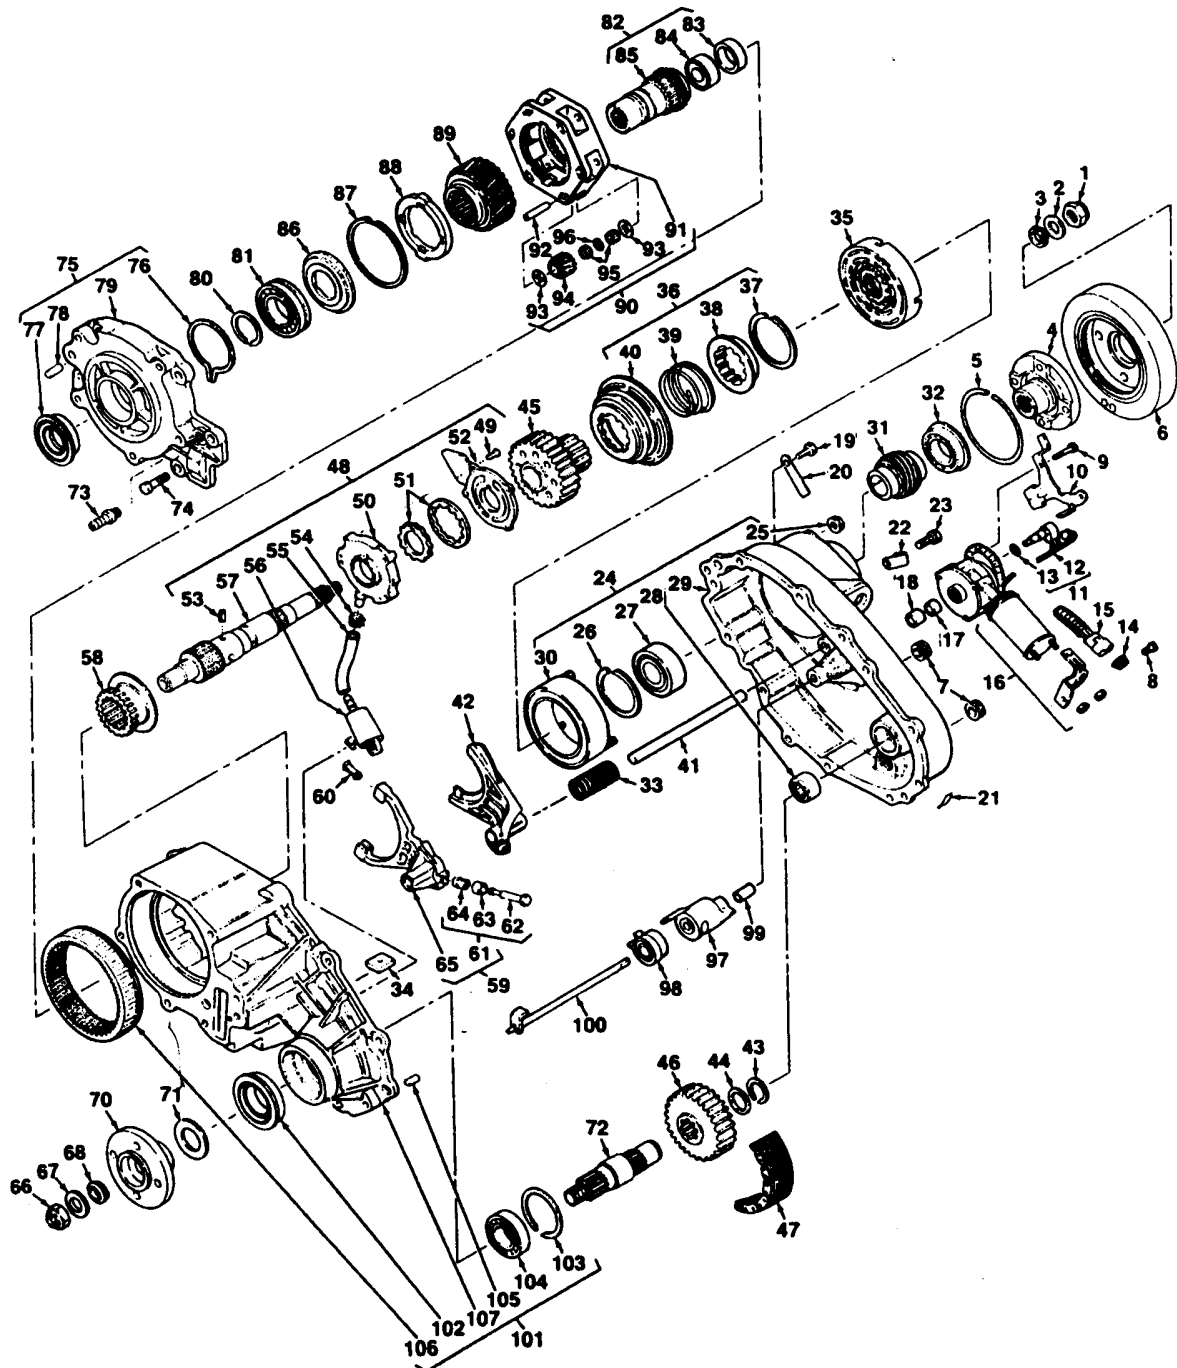

TRANSFER CASE (PART TIME 4408) 5D1-15

1 Nut	36 Lock-up Assembly	73 Breather Hose
2 Spring Washer	37 Snap Ring	74 Bolt
3 Oil Seal	38 Lock-up	75 Front Adapter Assembly
4 Companion Flange	39 Sleeve Return Spring	76 Snap Ring
5 Snap Ring	40 Lock-up Collar	77 Oil Seal
6 Torsional Damper	41 Rail Shaft	78 Spiral Pin
7 Pipe Plug	42 Lock-up Fork	79 Front Adapter
8 Bolt	43 Snap ring	80 Snap Ring
9 Bolt	44 Spacer	81 Bearing
10 Speed Sensor and Harness Bracket	45 Drive Sprocket	82 Input Shaft Assembly
11 Speed Sensor Assembly	46 Driven Sprocket	83 Sleeve Assembly
12 Speed Sensor	47 Drive Chain	84 Needle Bearing
13 O-Ring	48 Shaft and Pump Assembly	85 Input Shaft
14 Locking Clip	49 Screw	86 Thrust Washer
15 Connector	50 Pump Housing	87 Retaining Ring
16 Motor Assembly	51 Pump Gear Set	88 Thrust Plate
17 Oil Seal	52 Pump Cover	89 Sun Gear
18 Bearing	53 Spring Pin	90 Gear Carrier Assembly
19 Bolt	54 Hose Clamp	91 Planet Carrier
20 Tag	55 Hose Coupling	92 Pinion Shaft
21 Decal	56 Oil Strainer	93 Thrust Washer
22 Wiring Harness Clip	57 Output Shaft	94 Pinion Gear
23 Bolt	58 Reduction Hub	95 Needle Roller Bearing
24 Cover Assembly	59 Shift Fork Assembly	96 Pinion Needle Spacer
25 Nut	60 Shift Fork Facing	97 Electric Shift Cam
26 Snap Ring	61 Pin, Roller and Retainer	98 Torsion Spring
27 Bearing	62 Pin	99 Spacer
28 Needle Bearing	63 Cam Roller	100 Shift Shaft
29 Cover	64 Retainer	101 Case Assembly
30 Clutch Coil Assembly	65 Reduction Shift Fork	102 Oil Seal
31 Speed Gear	66 Nut	103 Snap Ring
32 Oil Seal	67 Plane Washer	104 Bearing
33 Return Spring	68 Oil Seal	105 Dowel Pin
34 Magnet	70 Companion Flange	106 Ring Gear
35 Clutch Housing	71 Spacer	107 Case
	72 Front Output Assembly	
