

MAINTENANCE SCHEDULE—PETROL VEHICLES: Lancer, Pajero, Outlander

Key: O = All Services, R = Replace, L = Lubricate, C = Check, Adjust or Replace if necessary.
(Parts and repairs arising from check items are for the customer's account.)

Item	Service Item	PDI	15 000 km	30 000 km	45 000 km	60 000 km	75 000 km	90 000 km	105 000 km	120 000 km	135 000 km	150 000 km	165 000 km	180 000 km	195 000 km
EXTERIOR AND INTERIOR															
1	Fit floor, seat and fender covers. (All vehicles)	O	O	O	O	O	O	O	O	O	O	O	O	O	O
2	All lights/Headlight focus	C	C	C	C	C	C	C	C	C	C	C	C	C	C
3	Indicators and emergency flashers, instrument cluster, dome light, wipers, hooter, windows and door locks.	C	C	C	C	C	C	C	C	C	C	C	C	C	C
4	Mirrors, clock, ventilation controls and air-conditioner operation.	C	C	C	C	C	C	C	C	C	C	C	C	C	C
5	Check brake & clutch pedal for play and height.	C	C	C	C	C	C	C	C	C	C	C	C	C	C
6	Windscreen washer containers - water levels, wiper blades and operation.	C	C	C	C	C	C	C	C	C	C	C	C	C	C
7	Brake pipes, unions, hoses, booster, check valve.	C	C	C	C	C	C	C	C	C	C	C	C	C	C
8	Body - damage, dents and scratches.	C	C	C	C	C	C	C	C	C	C	C	C	C	C
9	Do onboard self-diagnosis testing with MUT II tester (i.e. engine, ABS, etc., where applicable).	C	C	C	C	C	C	C	C	C	C	C	C	C	C
10	Doors bonnet boot latches, locks and hinges.	C	L	L	L	L	L	L	L	L	L	L	L	L	L
11	Replace air purifier (pollen) filter (Outlander & Pajero).			R		R		R		R		R		R	
12	Check SRS airbag system.									Every 10 years					
UNDER BONNET															
13	Fluid level in brake and clutch master cylinders; and flush and refill.	C	C	C	C	R	C	C	C	R	C	C	C	R	C
14	Power steering fluid and lines.	C	C	C	C	C	C	C	C	C	C	C	C	C	C

21

MAINTENANCE SCHEDULE—PETROL VEHICLES: Lancer, Pajero, Outlander

Key: O = All Services, R = Replace, L = Lubricate, C = Check, Adjust or Replace if necessary.
(Parts and repairs arising from check items are for the customer's account.)

Item	Service Item	PDI	15 000 km	30 000 km	45 000 km	60 000 km	75 000 km	90 000 km	105 000 km	120 000 km	135 000 km	150 000 km	165 000 km	180 000 km	195 000 km
UNDER BONNET															
15	Battery electrolyte level, specific gravity (SG), charge, routing of overflow pipe, terminal and holddown clamp tightness.	C	C	C	C	C	C	C	C	C	C	C	C	C	C
16	Coolant level and antifreeze content, check for leaks and pressure test cooling system and radiator cap. Flush radiator, refill with correct coolant/antifreeze.	C	C	C	C	R	C	C	C	R	C	C	C	R	C
17	Radiator heater hoses and clamps.	C	C	C	C	C	C	C	C	C	C	C	C	C	C
18	Condition and tension of all hoses and all V belts.		C	C	C	C	C	C	C	C	C	C	C	C	C
19	Air cleaner filter*.		C	C	C	C	C	C	C	C	C	C	C	C	C
20	Fuel filter*.					R				R				R	
21	Valve clearance (Lancer only).			C		C		C		C		C		C	
22	Spark plugs.			R		R		R		R		R		R	
23	Distributor cap, rotor, ignition cables.	C	C	C	C	C	C	C	C	C	C	C	C	C	C
24	Engine idle r/min and CO level.		C	C	C	C	C	C	C	C	C	C	C	C	C
25	Replace cambelt.							R						R	
26	Check exhaust gas recirculation (EGR) system (Outlander only).				C		C		C		C		C		C
27	Crankcase emission and ventilation system (Pajero & Outlander)			C		C		C		C		C		C	
UNDER VEHICLE															
28	Engine oil and filter*.		R	R	R	R	R	R	R	R	R	R	R	R	R

22

MAINTENANCE SCHEDULE—PETROL VEHICLES: Lancer, Pajero, Outlander

Key: O = All Services, R = Replace, L = Lubricate, C = Check, Adjust or Replace if necessary.
(Parts and repairs arising from check items are for the customer's account.)

Item	Service Item	PDI	15 000 km	30 000 km	45 000 km	60 000 km	75 000 km	90 000 km	105 000 km	120 000 km	135 000 km	150 000 km	165 000 km	180 000 km	195 000 km
UNDER VEHICLE															
29	Front axle oil*. (All 4x4 models except Outlander).	C	C	C	C	R	C	C	C	R	C	C	C	R	C
30	Rear axle oil*. (All 4x4 models).	C	C	C	R	C	C	C	R	C	C	C	R	C	C
31	Rear axle oil*. (All 2x4 models).	C	C	C	C	C	C	R	C	C	C	C	C	C	R
32	Transfer case oil*. (All 4x4 models).	C	C	C	R	C	C	C	R	C	C	C	R	C	C
33	Manual transmission oil*. (All 4x4 models).	C	C	C	C	R	C	C	C	C	R	C	C	C	C
33	Manual transmission oil*. (All 2x4 models).	C	C	C	C	C	C	R	C	C	C	C	C	C	R
33	Manual transmission oil* (Lancer only).	C	C	C	C	C	C	C	R	C	C	C	C	C	C
34	Automatic transmission oil*.	C	C	C	C	R	C	C	C	R	C	C	C	R	C
35	Steering box free play and operation, ball joints, CV joints, dust covers, steering linkages/knuckles, suspension linkage, axle and suspension parts* and grease where necessary.	C	C	C	C	C	C	C	C	C	C	C	C	C	C
36	Exhaust leaks.	C	C	C	C	C	C	C	C	C	C	C	C	C	C
37	Fuel pipes and lines.	C	C	C	C	C	C	C	C	C	C	C	C	C	C
38	Handbrake stroke and linkage.	C	C	C	C	C	C	C	C	C	C	C	C	C	C
39	Brake pads, discs, linings, drums (re-torque wheels after removal).		C	C	C	C	C	C	C	C	C	C	C	C	C
40	Visually inspect front and rear tyres for wear, damage, cuts and pressures including spare wheel (incl. vehicle ride heights for 4x4).		C	C	C	C	C	C	C	C	C	C	C	C	C
41	Prop-shafts, where applicable and drive shaft boots for 2x4 & 4x4 (grease where necessary).	C	C	C	C	C	C	C	C	C	C	C	C	C	C