

NOTE: The maintenance intervals listed are for vehicles operating under normal driving, road, and climatic conditions. More frequent attention may be necessary if the vehicle is subject to routine stop & go driving, extreme temperatures, dusty conditions, off-road driving, or frequent trailer towing. Consult your Land Rover Retailer for more information.

Maintenance Interval – whichever occurs first (based on expected vehicle display).														
SERVICE	Miles x 1000	15	30	45	60	75	90	105	120	135	150			
	Months	12	24	36	48	60	72	84	96	108	120			
	Kilometers x 1000	24	48	72	96	120	144	168	192	216	240			
Change engine oil and replace filter		●	●	●	●	●	●	●	●	●	●			
VEHICLE INTERIOR														
Reset the Service Interval Indicator		●	●	●	●	●	●	●	●	●	●			
Reset engine oil level indicator		●	●	●	●	●	●	●	●	●	●			
Check operation of all lights, warning indicators and horn		●	●	●	●	●	●	●	●	●	●			
Check operation of front/rear wiper washer systems		●	●	●	●	●	●	●	●	●	●			
Check condition and security of seats and seat belts		●	●	●	●	●	●	●	●	●	●			
Replace pollen filter		●	●	●	●	●	●	●	●	●	●			
VEHICLE EXTERIOR														
Check condition of wiper blades		●	●	●	●	●	●	●	●	●	●			
Check operation of all door checks, hood latch, and fuel flap; lubricate door checks		●	●	●	●	●	●	●	●	●	●			
ENGINE COMPARTMENT														
Check / top up fluid levels (brake, power steering, windshield washer)		●	●	●	●	●	●	●	●	●	●			
Check / top up coolant level; check specific gravity		●	●	●	●	●	●	●	●	●	●			
Check condition of accessory drive belt(s)		●	●	●	●	●	●	●	●	●	●			
Change brake fluid: every 3 years				●			●			●				
Change engine coolant: every 10 years											●			
Replace spark plugs								●						
Replace air cleaner elements						●								
Replace accessory drive belt														

Maintenance Interval – whichever occurs first (based on expected vehicle display).													
SERVICE	Miles x 1000		15	30	45	60	75	90	105	120	135	150	
	Months		12	24	36	48	60	72	84	96	108	120	
	Kilometers x 1000		24	48	72	96	120	144	168	192	216	240	
VEHICLE UNDERBODY													
NOTE: Remove all road wheels before inspecting brake components.													
Inspect brake pads for wear, calipers for leaks, and discs for condition		●	●	●	●	●	●	●	●	●	●	●	
Check adjustment of electronic parking brake		●	●	●	●	●	●	●	●	●	●	●	
Inspect tire pressures, condition, and tread depth		●	●	●	●	●	●	●	●	●	●	●	
Inspect exhaust system		●	●	●	●	●	●	●	●	●	●	●	
Inspect for fluid leaks		●	●	●	●	●	●	●	●	●	●	●	
Inspect condition of driveshafts, suspension, and steering boots/gaeters			●	●	●	●	●	●	●	●	●	●	
Inspect fuel, hydraulic and fluid pipes, hoses and unions			●	●	●	●	●	●	●	●	●	●	
Inspect electrical harnesses, routing and connections			●	●	●	●	●	●	●	●	●	●	
Lubricate wheel spigot bore with anti-seize compound; install road wheels to opposite side of same axle (except unidirectional tires, which install on same side)	●	●	●	●	●	●	●	●	●	●	●	●	
Replace all flexible brake hoses: every 6 years								●					
Replace fuel filter: every 10 years											●		
Change transmission fluid and filter: every 10 years											●		
Change rear locking differential oil							●					●	
Change front and rear axle oil (non-locking differential): every 10 years							●					●	
Change transfer box oil; replace drain and fill plugs and washers												●	
Conduct road test; select LOW range gears and drive the vehicle 3 – 4 vehicle lengths, then reselect HIGH range gears	●	●	●	●	●	●	●	●	●	●	●	●	
If fault lamps are illuminated, interrogate with IDS and report findings	●	●	●	●	●	●	●	●	●	●	●	●	
Check for any outstanding Recalls or Service Actions	●	●	●	●	●	●	●	●	●	●	●	●	
Endorse Service Record	●	●	●	●	●	●	●	●	●	●	●	●	