

PARK BRAKE - ADJUST


Service repair no - 70.45.09

Check



NOTE: The park brake should be fully operational on third notch of ratchet.

1. Raise one rear wheel clear of ground and support on axle stand.
2. Release park brake lever.

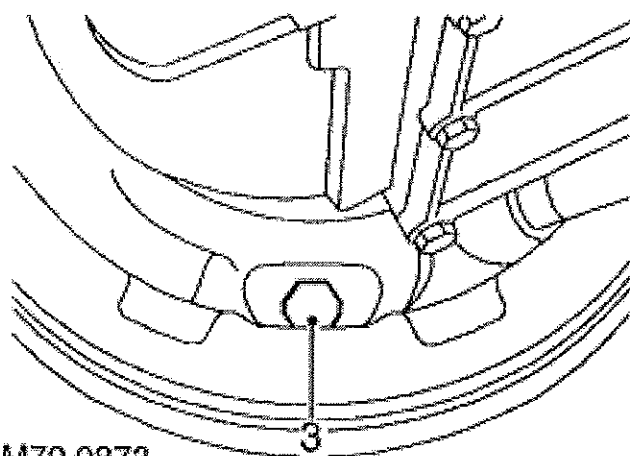

M70 0873

3. Tighten brake adjuster to **25 Nm (18 lbf.ft)** to fully expand shoes to drum.
4. Back off adjuster $1\frac{1}{2}$ turns, check that drum is free to rotate.
5. Check operation of park brake lever to give pawl 2 notches free movement on ratchet before being fully operational on third notch of ratchet. Adjust park brake accordingly if lever travel exceeds the above tolerance.



CAUTION: Cable adjustment must **ONLY** be used for initial setting and to compensate for cable stretch. It **MUST NOT** be used to take up brake shoe wear, which **MUST** be adjusted at brake drum.

6. Remove axle stand and wheel chock.