


FUEL PUMP PIPE

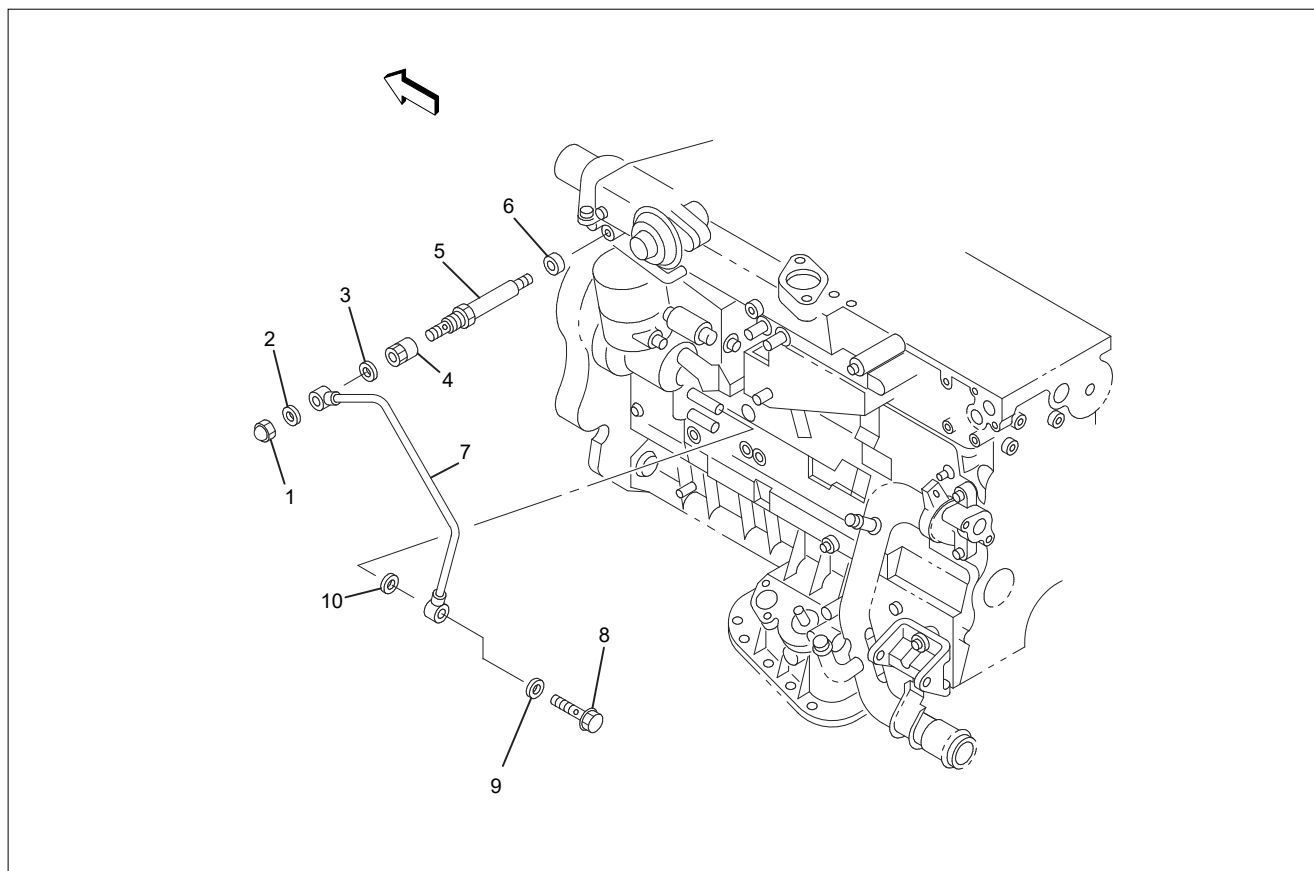

040R200002

Legend

- | | |
|--------------|--------------------|
| (1) Cap Nut | (6) Gasket |
| (2) Gasket | (7) Fuel Pump Pipe |
| (3) Gasket | (8) Eye Bolt |
| (4) Pipe Nut | (9) Gasket |
| (5) Adapter | (10) Gasket |

REMOVAL

1. Remove eye bolt.
2. Remove cap nut.

NOTE: The eye bolt and cap nut should be disconnected with cloth tied around them to prevent flowing out of fuel.

3. Remove fuel pump pipe.
4. Remove pipe nut.
5. Remove adapter.

INSTALLATION

1. Apply engine oil to the thread, then install adapter with new gasket.

Torque : 13 N·m (1.3 kg·m/113 lb in)

NOTE: Be careful not to enter the foreign material.

2. Apply engine oil to the thread, then install pipe nut.

Torque : 14 N·m (1.4 kg·m/122 lb in)

NOTE: Do not apply oil to cap nut side.

3. Install fuel pump pipe, new gaskets and cap nut to adapter temporarily. Do not tighten the cap nut.
4. Install eye bolt with new gasket then tighten to specified torque.

Torque : 30 N·m (3.1 kg·m/22 lb ft)